
ooze®

HiLO

CONCEAL BATTERY

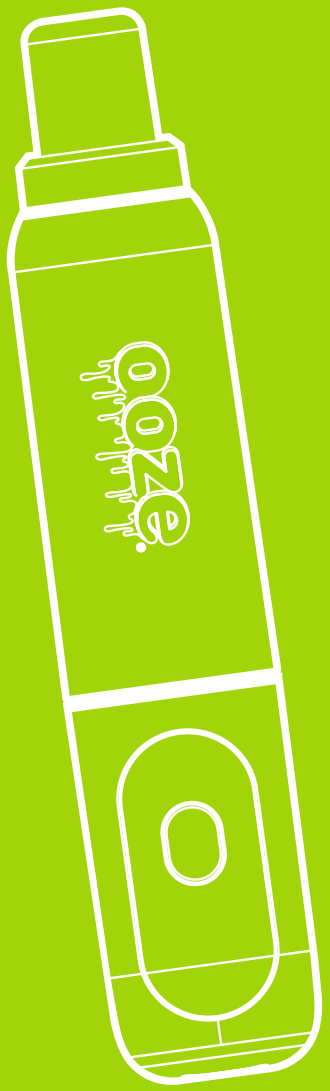

CONCEALS 510s

DIGITAL SCREEN

FLEX TEMP

BATTERY INDICATOR

400 mAh

AUTO OFF

HiLo
CONCEAL BATTERY

HOW TO USE THE HiLo

1. Pull the cap off and screw your cartridge into the 510 thread. Replace the cap.
2. Click the button 5x to turn the battery on.
3. Click the button 3x to change voltage levels.
4. Click the button 4x to check your battery percentage.
5. Press and hold the button to take your hit. Enjoy!

CHARGING THE HiLo

1. The Hilo has a type-c charging port on the bottom. A charging cable is not included with the Hilo, but any type-c cable can be used.
2. Always charge your device with a wall outlet.

LED SCREEN DIGITAL CONTROL FLEX TEMP



SAFE GUARDS

- ⚠ Keep away from water.
- ⚠ Only charge indoors.
- ⚠ Only use in legal and adult use state/providence/country.
- ⚠ Only use approved Ooze attachments.
- ⚠ Never leave unattended around children/pets.
- ⚠ Never disassemble.
- ⚠ Only use wall outlet for charging.
- ⚠ Do not leave unattended while charging.
- ⚠ Do not leave charging overnight.
- ⚠ Always dry thoroughly after cleaning.