ooze

Runt

MINI BATTERY

Warranty Protected

FLEX TEMP

DIGITAL SCREEN


BATTERY INDICATOR

AUTO OFF

TECH GRIP

POCKET PORTABLE

400 mAh

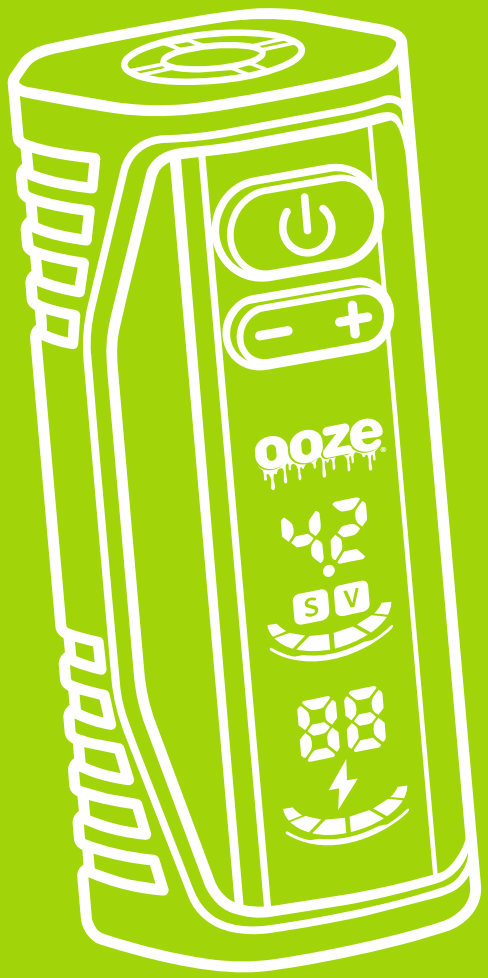

Runt MINI BATTERY

QUICK START GUIDE

1. Click ⏻ button 5x to turn on.
2. Use the -/+ buttons to adjust voltage in 0.1V increments.
3. Click ⏻ 2x to run Prep Mode. This is a gentle, 15-second heat cycle that clears any clogs in your cartridge.
4. Press and hold ⏻ to take your hit.
5. The Runt shuts off automatically after 10 minutes, or click 5x to power off.

DIGITAL SCREEN



TURNED ON

Voltage on top, Battery % on bottom



IN USE

Timer on top, Battery % on bottom



CHARGING

Battery % on bottom

CHARGING

Plug a type-c (universal port) charging cable into the port on your Runt.

The screen will show your battery percentage until it reaches 100%. Once fully charged, the lightning bolt symbol, battery percentage, and the Ooze logo will light up for 1 minute. After that, the screen will go black.

**The Runt does NOT include a charging cable, but you most likely already have a type-c cable laying around the house.*

SAFE GUARDS

- Keep away from water.
- Only charge indoors.
- Only use in legal and adult use state/providence/country.
- Only use approved Ooze attachments.
- Never leave unattended around children/pets.
- Never disassemble.
- Only use wall outlet for charging.
- Do not leave unattended while charging.
- Do not leave charging overnight.
- Always dry thoroughly after cleaning.

@OOZELIFE #OOZELIFE

WWW.OOZELIFE.COM