ooze®

TRIGGER

VAPORIZER MAX



- ONYX ATOMIZER
- WATER BUBBLER
- TECH GRIP
- CARB CAP
- DIGITAL SCREEN
- TRAVEL CASE

NEW C-CORE TECHNOLOGY

2400 mAh


HOW TO USE THE TRIGGER

GET STARTED

1. Choose your Onyx Atomizer and screw it onto the device.
2. Fill the glass water bubbler to halfway up the arch. Don't overfill, but make sure the holes in the glass arch are covered.
3. Move the carb cap (if using) to the side and use a dab tool or Hot Knife to load extract into the center of the atomizer. Replace the carb cap (if using).

SETTING UP YOUR TRIGGER SESSION


1. Pull the Trigger Button 5x to turn the device on and off. It will buzz once.
2. Pull the Trigger Button 3x to select your voltage level. Check your level with the power bars on the right side of the screen.

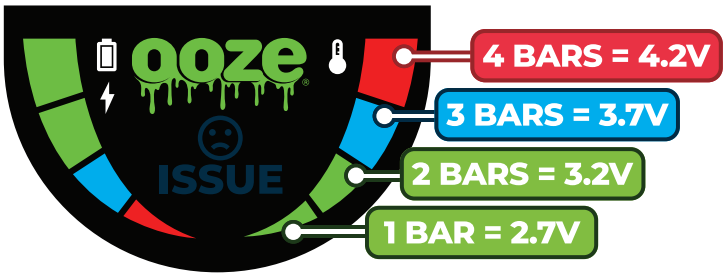


CHARGING

HOW TO CHARGE THE TRIGGER

1. Use the type-c charging cable with a wall outlet to charge your Trigger.
2. The battery icon & lightning bolt will flash and the power bars will fill back up on the screen as the device charges.
3. When it reaches 100%, the screen will shut off.

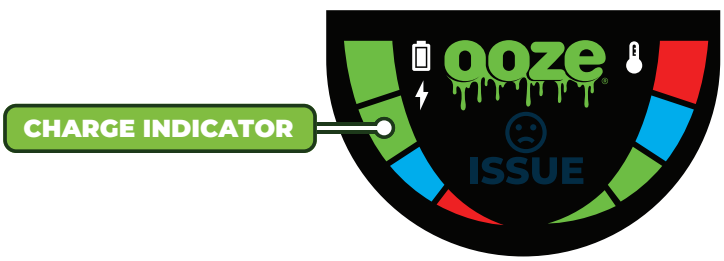

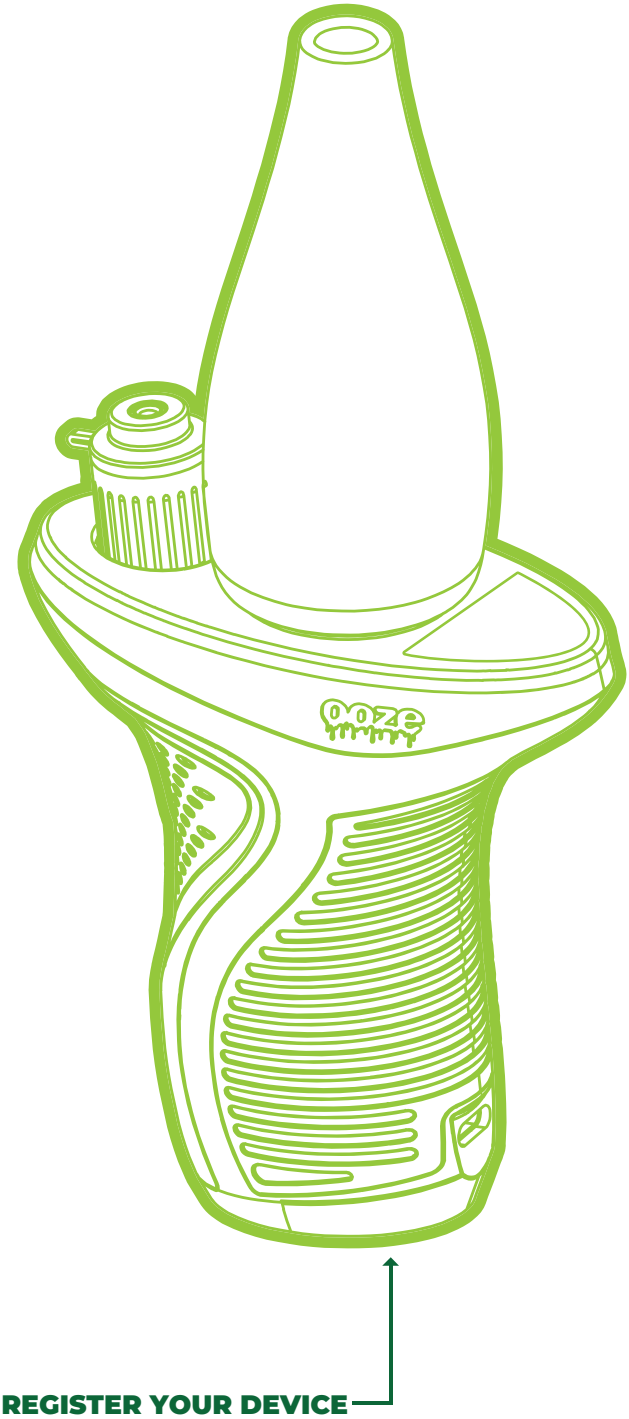

REGISTER YOUR DEVICE

1. Your Trigger has an authentication code on the bottom of the device.
2. Go to ooze.life/register and use this code to fill out the registration form.
3. Submit the form. Your Trigger is officially registered in our system, and your warranty is activated!

USING THE TRIGGER VAPORIZER MAX

There are two methods to taking a dab from the Trigger. It depends on if you want to hold the button while you take your hit, or if you'd rather let it heat up and run on its own.

MANUAL MODE

- Press and hold the Trigger Button down while you take your dab, up to 15 seconds. The heat will cut as soon as you release the button.

SESH MODE

- Pull the Trigger Button 2x to activate Sesh Mode. The Ooze logo will flash red for 5 seconds while it's heating up, then buzz and turn green when it's at your desired temperature.
- You can rip the Trigger for 13 seconds without touching the button. It will stop heating once the Sesh Mode cycle completes.

TROUBLESHOOTING

When this appears on the screen, pay attention to how many times the Trigger pulses. This will tell you what's wrong.



- **5 Pulses**: Short circuit. Try a new atomizer. If this doesn't work please reach out to customers support.
- **3 Pulses**: Open circuit. Try tightening your atomizer. If it's already tight, try loosening. Doesn't help? Try a new atomizer. If none of these steps work, please reach out to customer support.

OTHER ISSUES

- **All Lights Turn Red + Flash 10 Times:** The Trigger is overheating. Take a break for a few minutes and try again.
- **Battery Icon Flashes Red + 5 Pulses:** Your Trigger is dead and needs to be charged.

HOW TO CLEAN THE TRIGGER

It is SO much easier to clean your device directly AFTER your session! Wipe off the little bit of warm residue with a swab easily. Don't let it sit, harden and turn to cement inside your device. Set future you up for success!

1. Turn the device off and disassemble all the parts: remove the atomizer and empty and remove the glass chamber.
2. Dunk the glass chamber in a pouch of Ooze Resolution Res Gel, or fill it with a bit of alcohol and cover the bottom with a medium silicone Res Cap (sold separately). Give it a shake.
3. Use a Micro Swab to clean the threads where the atomizer screws in, and the area below the glass chamber. These slim swabs are the perfect size to clean the airway inside the device.
4. Reassemble the device and screw your atomizer back in. Add 2-3 drops of alcohol to the azul ceramic dish.
5. Heat the device and watch the alcohol burn off the dish. It should return to its original blue color. Stop heating the atomizer once the alcohol has evaporated. You may need to repeat this a few times.
6. If your atomizer isn't turning back to blue, it may be time to replace it. Use the other atomizer in the Trigger box, or grab a replacement pack from oozelife.com.

SAFE GUARDS

- Keep away from water.
- Only charge indoors.
- Only charge with included charger - no others!
- Only use in legal and adult use state/province/country.
- Only use approved Ooze attachments.
- Never leave unattended around children/pets.
- Never disassemble.
- Only use wall outlet for charging.
- Do not leave unattended while charging.
- Do not leave charging overnight.
- Always dry thoroughly after cleaning.

Important!
Save these instructions!